


Shallow Offset (hub used by Quickie & Colours)

Offset Measurements:


A .1750" / 4.445 mm

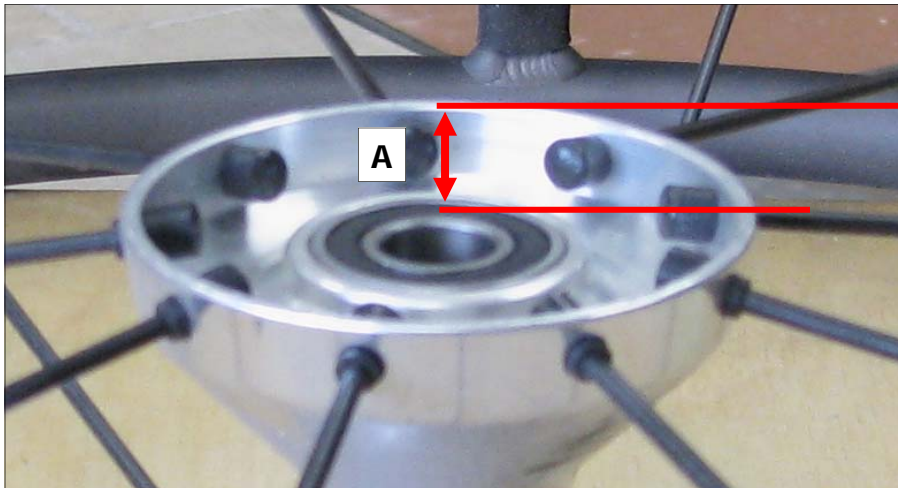

Deep Offset (hub used by TiLite)

Offset Measurements:

B .4250" / 10.8mm

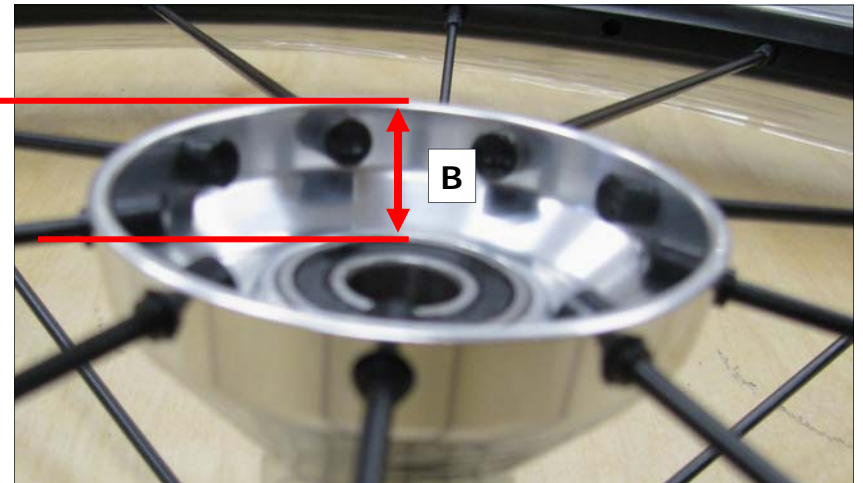

Note:

To keep the overall width of the chair as narrow as possible, the deep offset hub works best with the ADI spline drive inserts.